



**Compac Pump Communications**

Wire pump communications to these terminals

**(INSTALLER TO WIRE)**

Compac pumps are wired in parallel  
Swap wires if pump does not communicate

**Tank Gauging**

Wire tank gauge to these terminals

**(INSTALLER TO WIRE)**

Swap Tx and Rx wires if tank gauging does not display

**Notes:**

- Use appropriately sized cable for the application
- Use appropriate cable for hazardous zones where required
- Do not run the communications cables close to power cables
- It is recommended to use ferrules on all communication wires
- Gland all cables that enter the cabinet
- Seal all unused holes in the cabinet
- External aerial cable (option) screws into RF socket on cellular modem
- Always replace electrical covers



**OPT INSTALLATION WIRING DIAGRAM**  
**Compac Pump Connections**

**REVISION A**

DATE : 17 October 2012