



compac

INTEGRATED REFUELLING SOLUTIONS

Changing the SD card

Version 1.0

Date:14/03/2024

Compac Industries Ltd.
52 Walls Road. Penrose. Auckland 1061. New Zealand.
PO Box 12 417. Penrose. Auckland 1642. New Zealand.
Tel: +64 9 579 2094 Fax: +64 9 579 0635
info@compac.co.nz




Changing the SD Card

Compac recommends the SD card needs to be a high endurance name brand SD card with the capacity of 16 to 64 gigabytes


First turn off the unit

Locate the processor board. You might have to take the covers off or open the Cabinet


There are two types of comms boards that you might encounter a small one and a longer one. These boards cover the processor board so you might have to remove the comms board to see the SD card

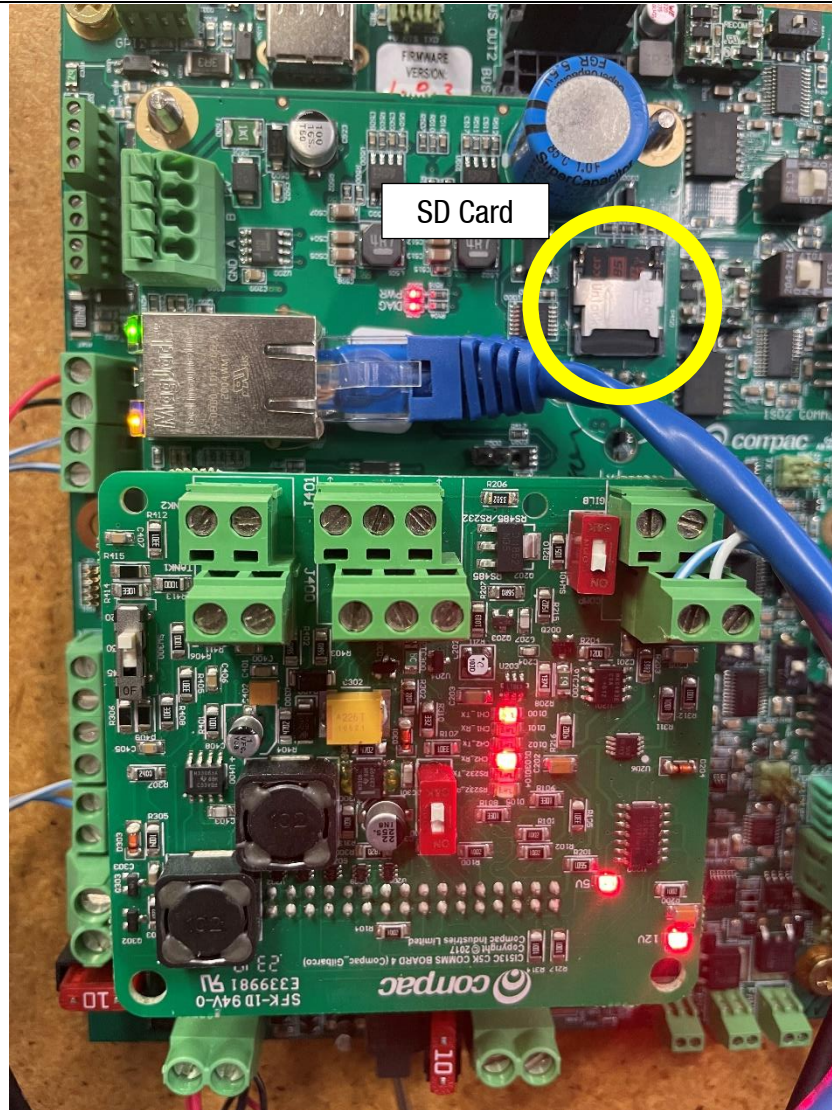


This is the processor board with the small comms card showing the SD card

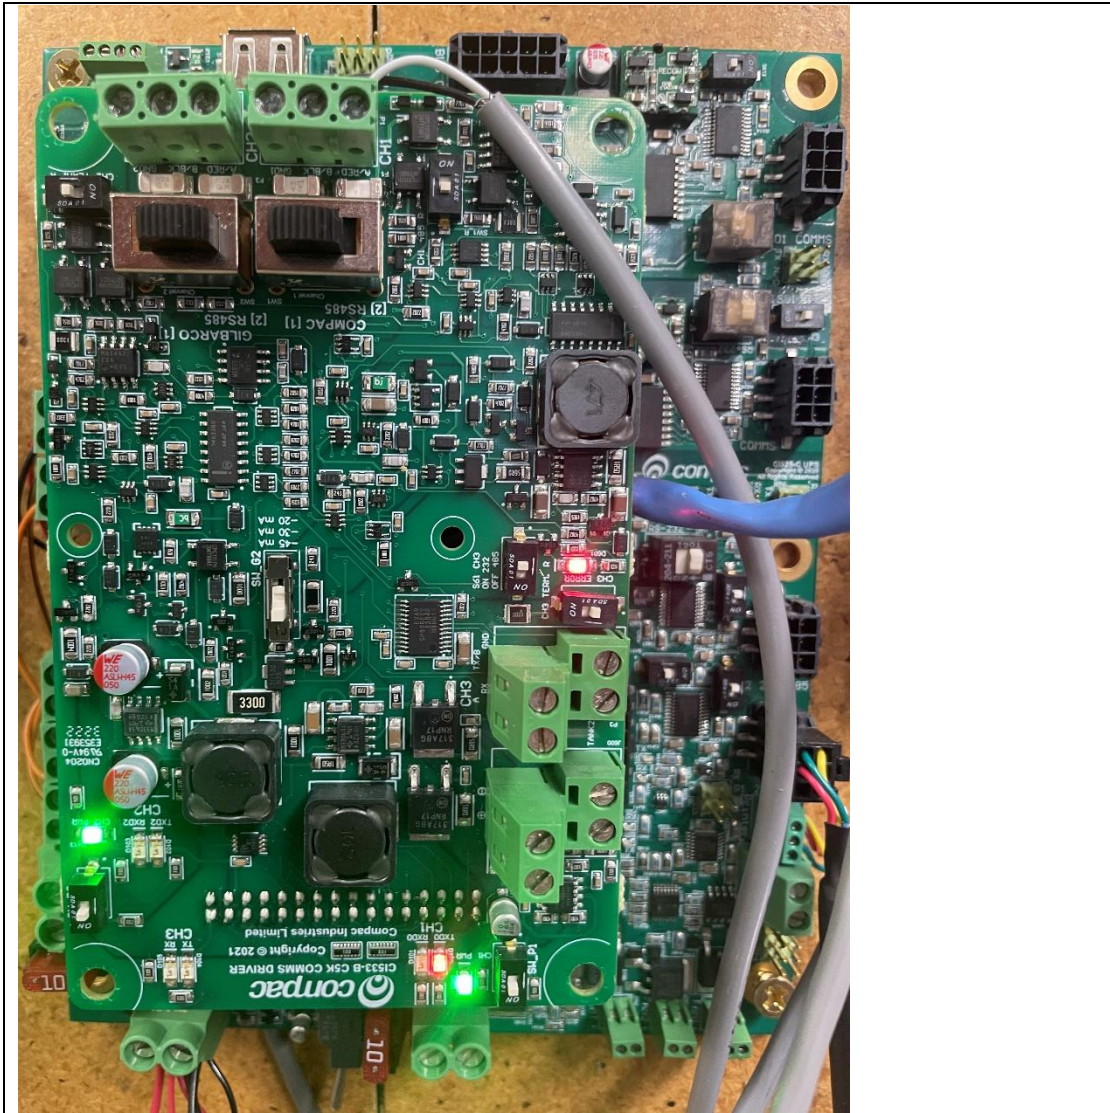


This is the processor board with the large coms card. You may have to remove the comms card to access the sd card.

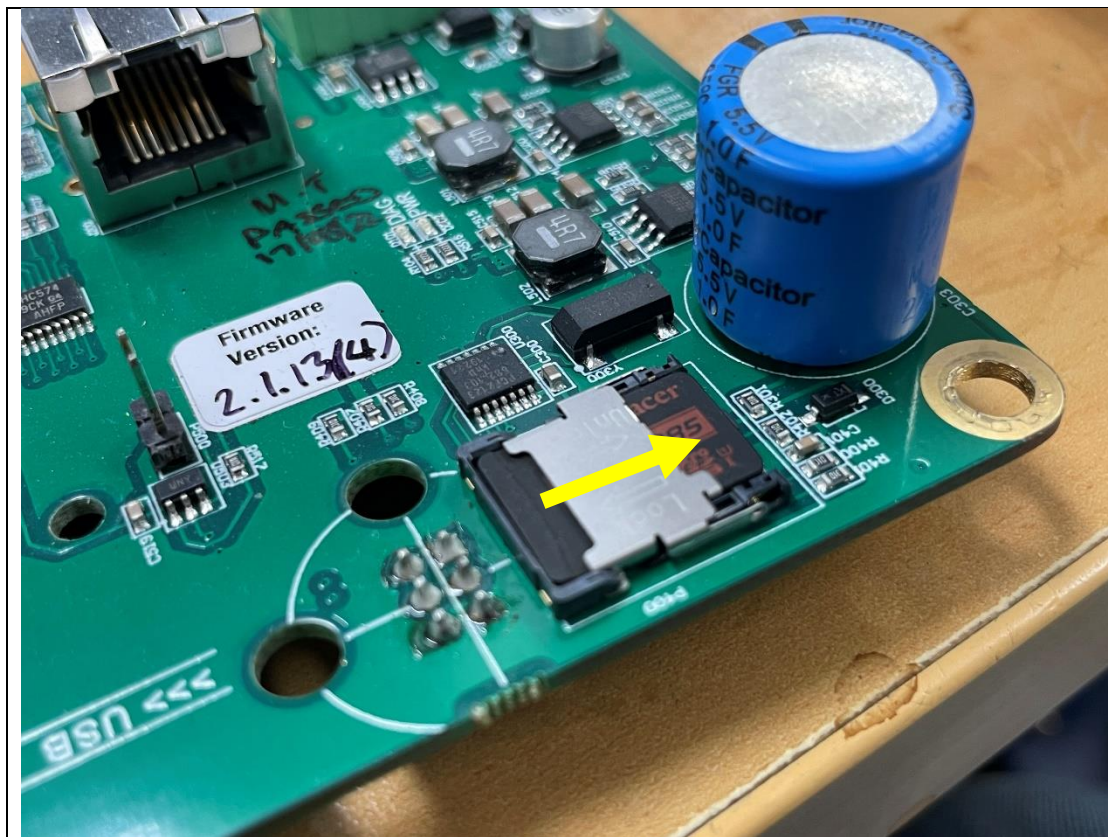

Place your finger on the metallic piece and push the clip the direction of the arrow to unlock the SD card caddy.

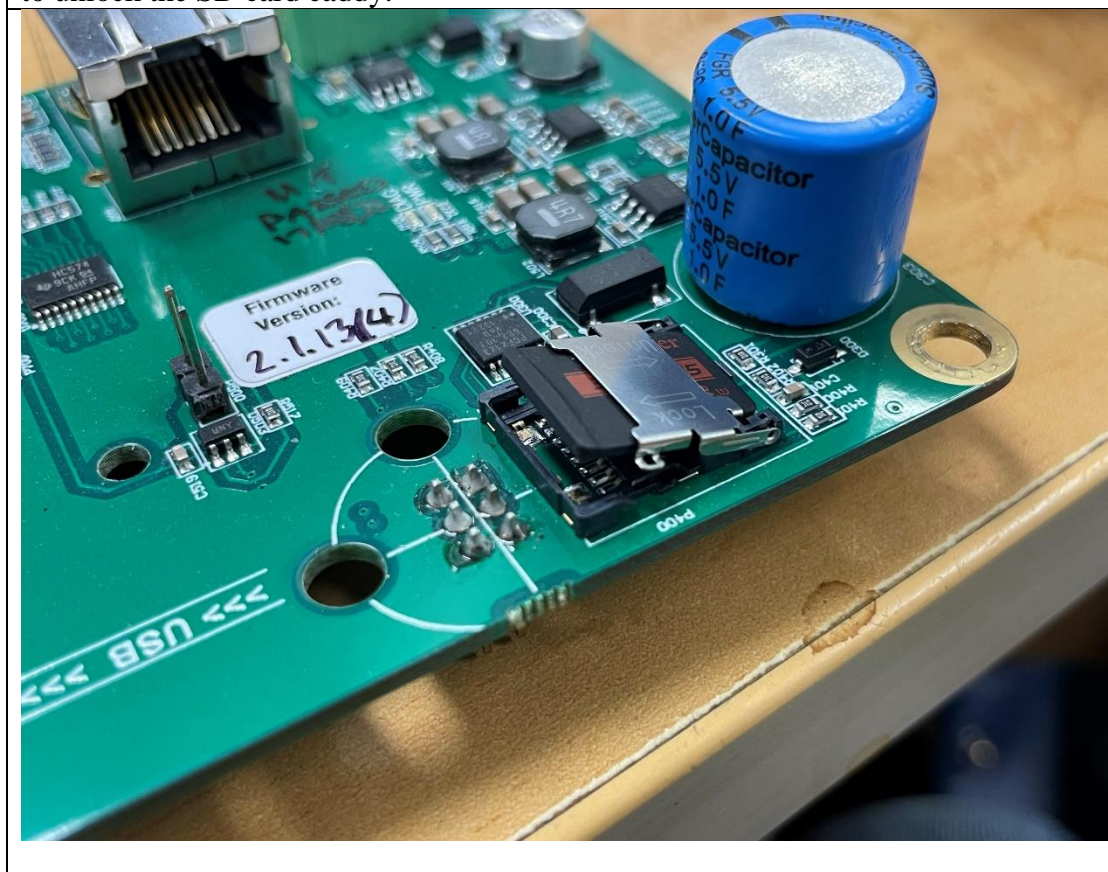

The sd card and the caddy will pop open and you should be able to open the caddy and remove the SD card

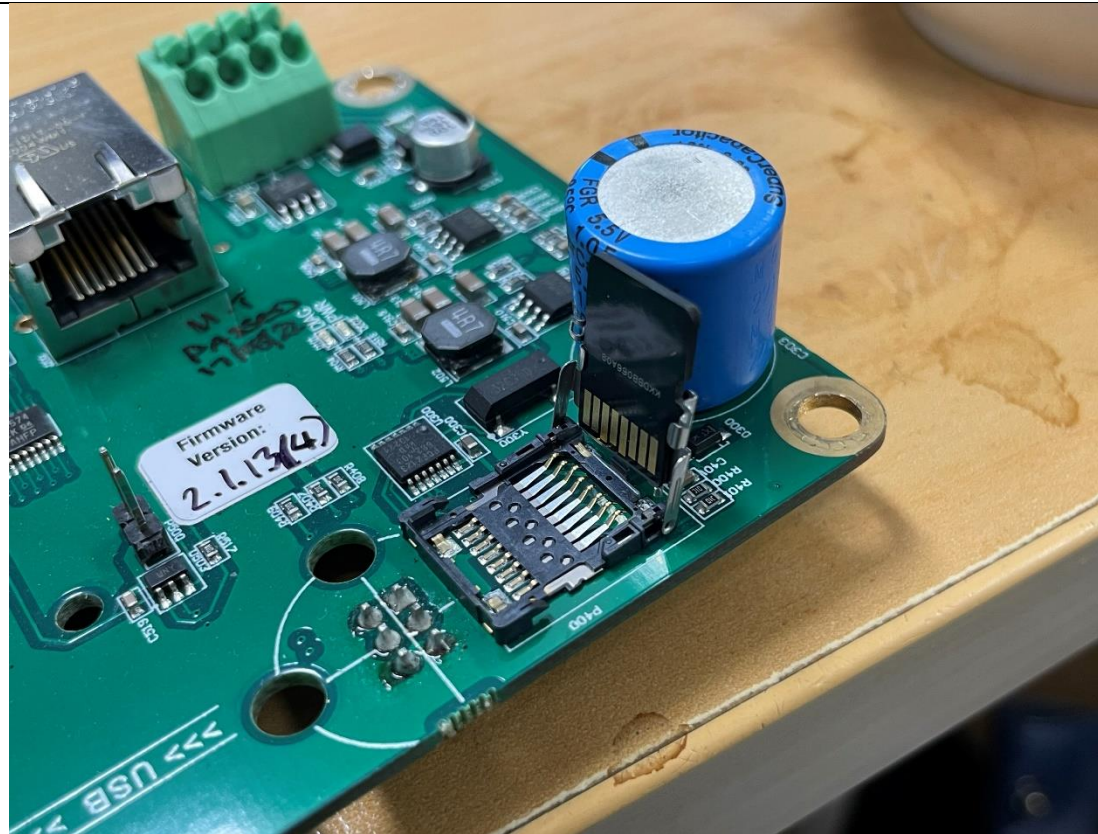

Reinstall the new sd card and do the opposite to install the sd card